 


BESTISAN

Best Artisan & Better Than Most


Quick Start

(SK03)

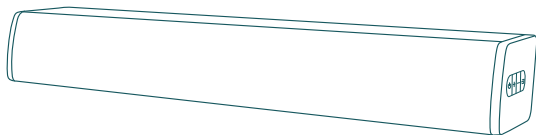


Please read all instructions before use for the best performance of this product. Save these instructions for future reference.

 
Box Contents

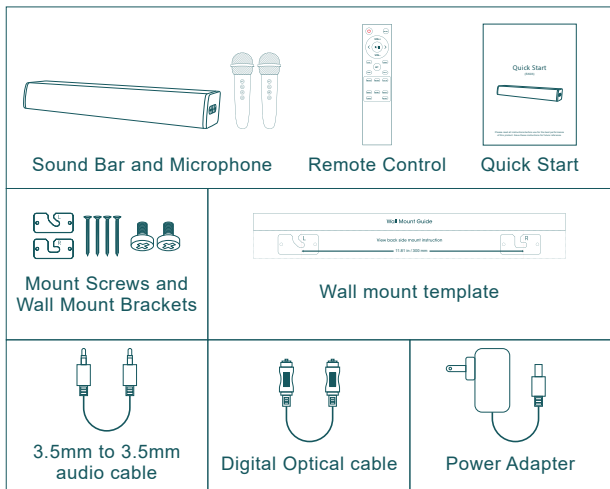

LED Indicators and Button Introduction

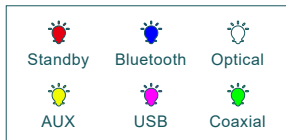 

Right side of Sound Bar

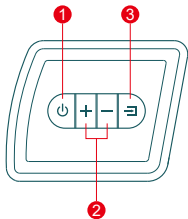 


- 1 Press to turn on/change the audio source; Press and hold it to turn off
- 2 Press to previous/next track; Press and hold it to decrease/increase the loudness of audio
- 3 Select the source input mode(Bluetooth -> Optical ->Coaxial -> AUX -> USB); Press and hold to reset treble and bass to factory settings

Know Your Remote



	Power button		Mute/Unmute
	Volume up		Volume down
	Previous track		Next track
	Play/pause		Optical mode
	Coaxial mode		Bluetooth mode
	USB mode		AUX mode
	Movie mode		Music mode
	Dialogue mode		Increase or decrease treble
	Increase or decrease bass		Restore factory settings

 Microphone Introduction

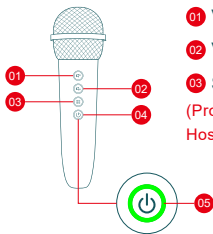

01 Volume+

02 Volume-

03 Sound effects
(Professional/KTV/
Host/Theater Mode)


04 Power switch

(long press to start up, long
press to turn it off. When it's
power on, short press to switch
different frequency)


Note: When there is interference of the
same frequency, you can press the power
button to switch different frequencies.

05 LED indicator

Charge	The red indicator is steady on when it is in charging status, and the indicator is off when it is fully charged. (It can be fully charged in about 2.5 hours and can be used continuously for about 8 hours)
Power on	The green indicator is steady on.
Low power	The indicator flash quickly.

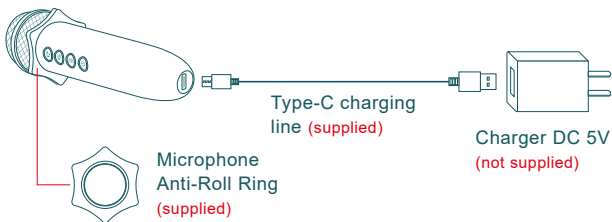 


Connection Diagram

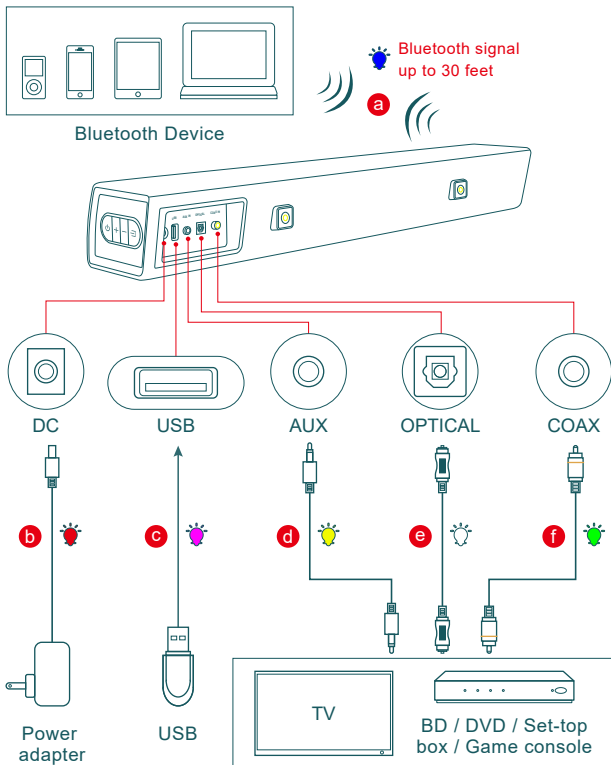 

Connecting with a TV

 Back of Sound Bar

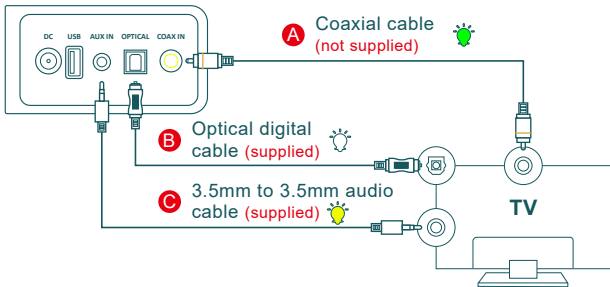


- A** Method 1. Connecting using an Coaxial cable. Select Coaxial mode and set the TV's audio output to "PCM".
(More information on PCM page)
- B** Method 2. Connecting using an Optical cable. Select Optical mode and set the TV's audio output to "PCM".
(More information on PCM page)
- C** Method 3. Connecting using a 3.5mm to 3.5mm audio cable. Select AUX mode.

Setting "PCM" on your TV

When all cables are connected properly, and LED indicator lights properly, if there is no sound from tv or Sound Bar, please setting your tv as below:


1. Press "Menu" on the TV's remote control.
2. Press the arrow keys on the remote to scroll to "Audio Settings."
3. Press "OK" on the remote control.
4. Scroll to "Advanced Audio" and press "OK". Some televisions may not have an "Advanced Audio" menu and may list various audio settings instead.
5. Scroll to "Audio Output Mode" or "Digital Audio Output Mode" and press "OK".
6. Scroll until "PCM" is displayed as the current audio output.
7. Press "OK" to save the settings.

 Connecting a Bluetooth Device

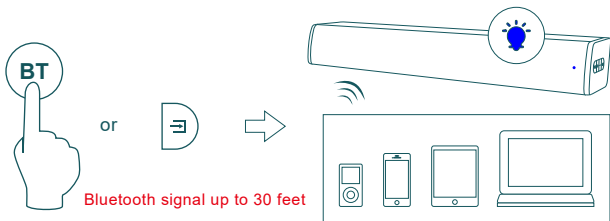

- a. Press the "BT" button on the remote or press the "BT" button on the right side of Sound Bar, the LED indicator blinks blue.
- b. Turn on Bluetooth on the Bluetooth device.
- c. Select "SK03" and connect it. When your Bluetooth device is connected, the LED indicator blinks blue slowly.
- d. Play music files from the device, connected via Bluetooth, through the Sound Bar.


 
Installing the Wall Mount

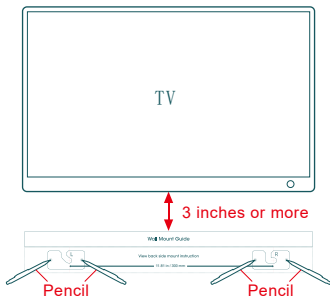

1. Place the wall mount guide against the wall surface. Push a pencil tip to mark the four bracket holes for supporting screws, and then remove the wall mount guide.

- The template must be level.
- Leave 3 inches at least between the template and TV.

  2. Using an appropriately sized drill bit, drill a hole in the wall at each marking. Push a screw through each bracket, and then screw each screw firmly into a support screw hole.



3. Insert the two wall-mount screws into the wall-mount screw holes, and then tighten them with a screwdriver.

4. Plug in power cable and audio cable before install the Sound Bar on the wall.

Install the Sound Bar by hanging on the brackets on the wall.



Troubleshooting

If you have a problem with your Sound Bar, there is quick simple solution, first make sure:

- The cables between Sound Bar and input devices are securely connected, the power adapter is also connected to a working power source.
- The cables between Sound Bar and input devices are securely connected, the power adapter is also connected to a working power source.

No sound or crackling noise

- Check if all cables are connected properly.
- Press Mute on the remote to ensure the Sound Bar is not muted.
- Press Volume+ on the remote or the right side of your Sound Bar.
- Make sure you have selected the right input source on your remote, and the LED is lighting accordingly.
- If using Bluetooth, check if the sound on your device is under minimum volume.
- If using Optical, check if your device (TV/Cable Box/Projector/etc.) audio output set to PCM or turn the Dolby/dts off.
- When using cable connection, make sure your device has audio output port (not input).

Remote isn't working

- Check if the battery is installed properly with power.
- Check if the signal of the receiver is covered by something.
- Contact your retailer for assistance.

I hear buzzing or humming

- Ensure all cables and wires are securely connected.
- Connect a different source device (TV, Blu-ray player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device.
- Connect your device to a different input on the Sound Bar.

Bluetooth can't be connected

- Check if the Sound Bar is connected with the third Bluetooth device.
- Be sure that there are no solid obstructions between the Sound Bar and source device.(within 30 feet)
- Reboot the Bluetooth and connect again.

Hear echo when watching TV

- Setting your TV audio to External Speaker.
- Mute the TV speaker.

No sound from microphone

- Check if the microphone have power? If not, please charge it.
- Check whether the microphone volume is on, press the microphone "Volume +" to adjust the volume.
- Repair the microphone.
 1. Long press the power button of SK01 to shut down it;
 2. Long press the power button of the microphone to turn it on, and press the "volume+" and "volume-" button at the same time. The microphone LED indicator will flash quickly;
 3. Long press the power button of Sk01 to start it. It takes about 3-5 seconds for the pairing to complete.

No sound from microphone

- Check that the charger and charging cable are in good condition.
- Check whether the charging cable is plugged into the charging port.

Microphone interference

- Whether there is interference from other devices around the microphone.
- When other devices interferes, the frequency can be changed by pressing the power button of the microphone.

Have other questions?

- Please contact with your retailer for assistance.

Specifications

SK03 Specification	Microphone Specification
Power rating: 25W*2	Pickup: Moving pickup
Frequency response: 40Hz-20KHz	Sensitivity: -50dB
Signal to noise ratio dB: ≥80dB	Frequency response: 55Hz-15KHz
THD (total harmonic distortion): ≤1%	Maximum sound Pressure: 110dB
Bluetooth Version: Bluetooth v5.0	Charging voltage: DC 5V
Input Power: DC 19-21V	Battery: 18650, 2000MAH*1
Wireless reception: Wireless U-segment frequency	Wireless transmitting: Wireless u-segment frequency

Thanks for reading!

Best Artisan Corp.

801 DUPONT AVE SUITE F & G, ONTARIO, CA, 91761.

Support@bestisan.com