 


# Quick Start

(SR04F)

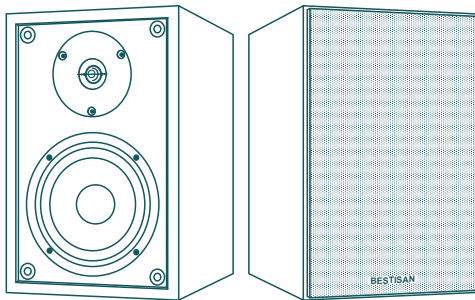

Please read all instructions before use for the best performance of this product. Save these instructions for future reference.

## Box Contents



Bookshelf Speaker



Quick Start



 
Speaker  
Connecting Cable



Stereo RCA to  
3.5mm Audio Cable




RCA to RCA  
Audio Cable



Power Adapter

## LED Indicators and Button Introduction

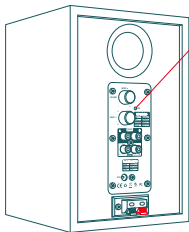 

Active Speaker

LED Indicators



Standby



 
Bluetooth



Line in 1



Line in 2

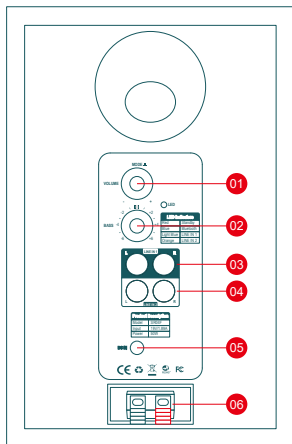


### Active Speaker

01. Master volume control /  
input selection

Press in to navigate between  
audio sources: Line in 1 ->  
Line in 2 -> Bluetooth

 02. Bass control

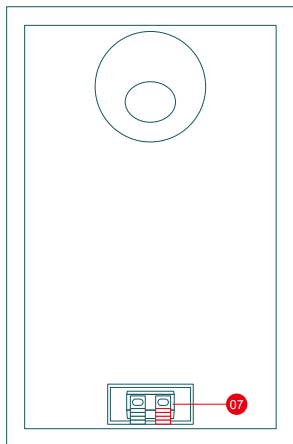

### Passive Speaker

03. Line in 1 input port

 
04. Line in 2 input port

05. Power port

06. Left speaker audio output


07. Left speaker audio in

## Connection Diagram

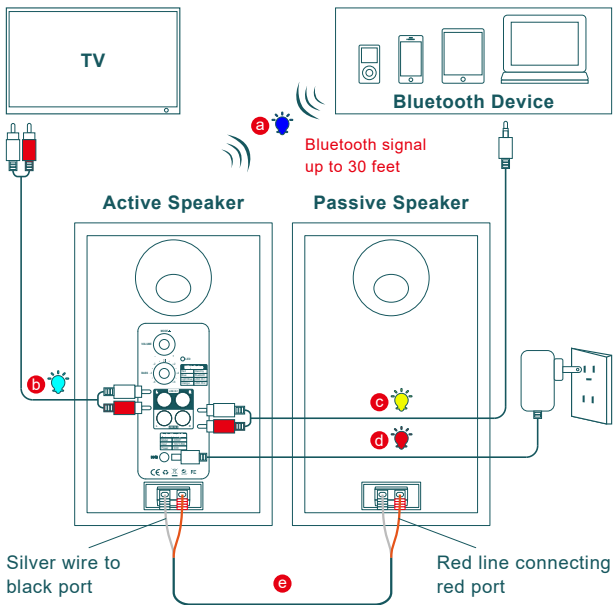


- a** Bluetooth
- b** RCA to RCA audio cable (supplied)
- c** Stereo RCA to 3.5mm audio cable (supplied)
- d** Power Adapter (supplied)
- e** Speaker connecting cable (supplied)

## Line in Input

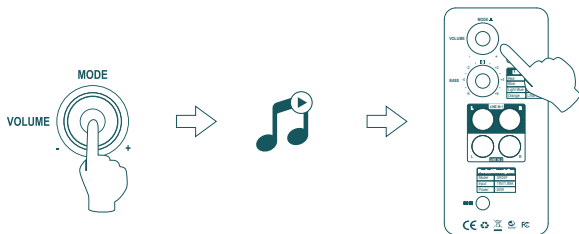 

1. Press the master volume control on the active speaker to select LINE IN input. The indicator turns to **Light Blue** (Line in 1) or **Orange** (Line in 2).
2. Using audio cable to connect audio source to the speaker.
3. Play from your device and adjust the volume accordingly.

## Connecting a Bluetooth Device

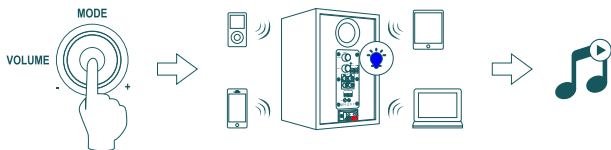 

- Turn on speaker and switch to Bluetooth mode by press the master volume control on back panel of the active speaker, The indicator turns to blue.
- Go to setup section on your source devices (mobile phones, tablets, etc )and search for nearby Bluetooth devices, you will find "BESTISAN SR04F" in the list.
- Play audio tracks on your device and adjust the volume to a desired level.
- Quick double-tap to disconnect Bluetooth.

### Note:

- Bluetooth connectivity and compatibility may be different among different source devices, depending on the software versions of source devices.
- To enjoy the full Bluetooth functions of this product, please ensure your mobile device supports ADP and AVRCP profile.

## Specifications

|                                     |                            |
|-------------------------------------|----------------------------|
| <b>Power output:</b>                | L/R: 25W + 25W             |
| <b>Signal to noise ratio dB(A):</b> | L/R: ≥85dB (A)             |
| <b>Input sensitivity:</b>           | LINE IN1: R/L: 500±50mV    |
|                                     | LINE IN2: R/L: 700±50mV    |
|                                     | Bluetooth: R/L: 700±50mFFS |
| <b>Frequency response:</b>          | 40HZ-20KHZ                 |
| <b>Bass unit:</b>                   | 4 inch (116mm)             |
| <b>Tweeter unit:</b>                | Φ13mm silk dome tweeter    |

## Troubleshooting

### No sound

- Check if the power indicator light is ON.
- Try to turn up the volume using either the master volume control or remote control.
- Ensure the audio cables are firmly connected and the input is set correctly on the speakers.
- Check if there is signal output from the audio source.

### Cannot connect via Bluetooth

- Make sure the speaker is switched to Bluetooth input, in other audio input mode Bluetooth can not be paired or connected. Disconnect from any Bluetooth device by press and hold the volume dial in Bluetooth mode, then try again.
- Effective Bluetooth transmission range is 10 meters, please make sure operation is within the range.
- Try another Bluetooth device for connection.

### The SR04F Bookshelf Speaker does not turn on

- Check if mains power is connected. or if the wall outlet is switched on.

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.





Thanks for reading!

Best Artisan Corp.

801 DUPONT AVE SUITE F & G, ONTARIO, CA, 91761.

**support@bestisan.com**